

FSLabs A320-X Crossbleed Engine Start

Caution: this procedure should only be performed only when parking brake is set!

Before Start:

APU Bleed OFF
ENG BLEED (running Engine) check ON
ENG BLEED (receiving Engine) OFF
X-BLEED OPEN

When Cleared to Start:

Check that the area behind and in front of engine is clear!

- Adjust the thrust of supplying engine to obtain a bleed pressure of 30 PSI before start initiation and make sure to maintain at least 25 PSI during engine start.

Engine Normal Start
Procedure

After Engine Available:

THRUST LEVER (supplying Engine) IDLE
X-BLEED AUTO
ENG BLEED (receiving Engine) ON
PACKS Check ON